


MAGNETIC SEPARATOR INSTRUCTIONS

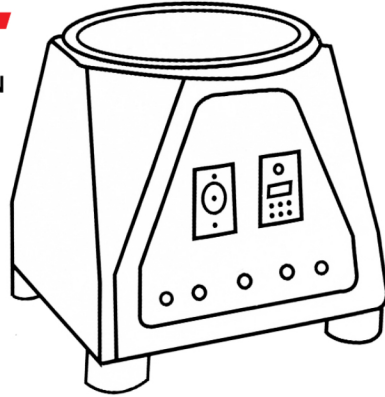

1. Remove the bowl (1) from the machine and place it on the table.
2. Place the separator (2) in the bowl to attract the pins. Because the parts are ferrous, only the pins will be attracted to the magnetic separator.
3. Once pins are attached to separator, remove separator from bowl. Place separator over cup (3) or container and pull trigger to release the pins.
4. Repeat as needed until all pins are separated from parts.

